


# ReWater® 220 VAC One Pump Relay Junction Box Installation Wiring Diagram

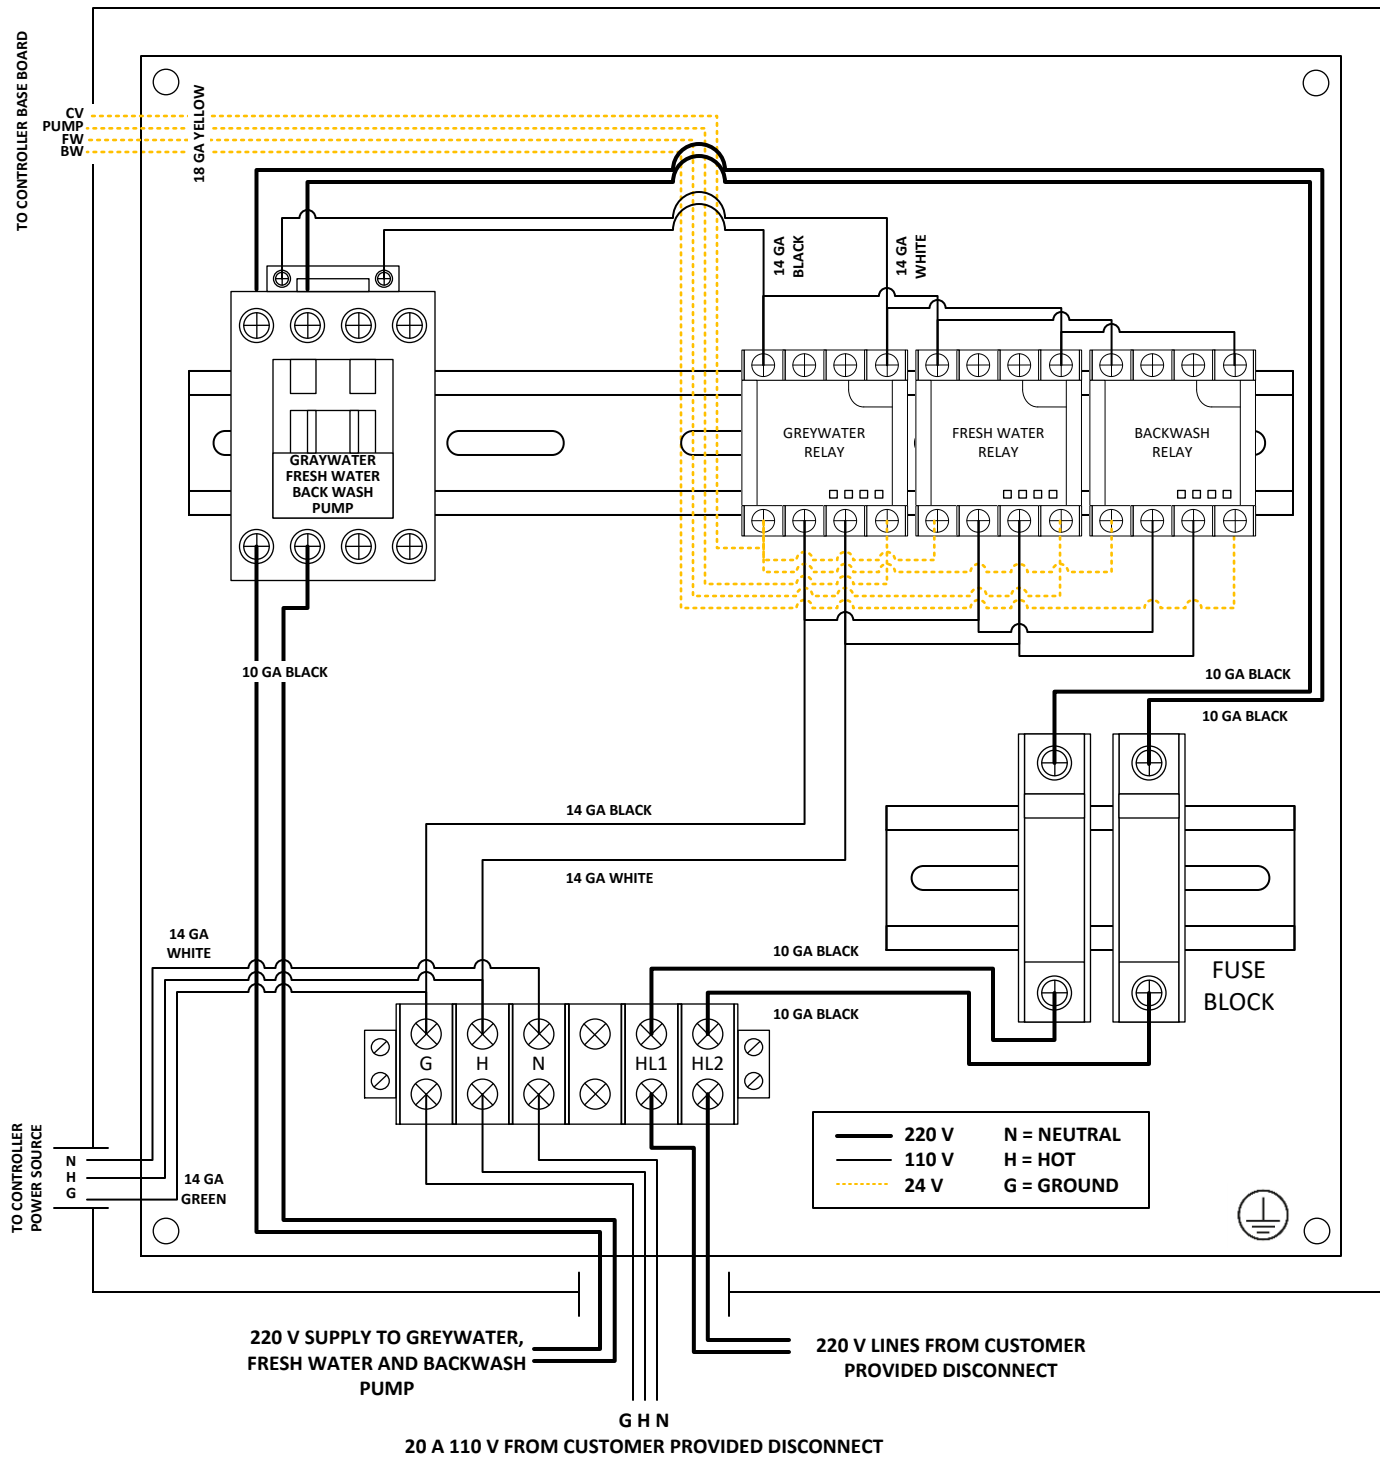

**WARNING**  
YOU MUST GROUND THE ReWater® CONTROLLER THAT THIS JUNCTION BOX IS ATTACHED TO BEFORE ANY WIRE IS CONNECTED TO THIS BOX OR THE CONTROLLER OR STATIC ELECTRICITY MAY SHORT THAT CONTROLLER'S PC BOARD AND RENDER IT INOPERATIVE, SUCH IS NOT COVERED BY THE WARRANTY.