

TO CONTROLLER



YOU MUST GROUND THE **ReWater®** CONTROLLER THAT THIS JUNCTION BOX IS ATTACHED TO BEFORE ANY WIRE IS CONNECTED TO THIS BOX OR THE CONTROLLER OR STATIC ELECTRICITY MAY SHORT THAT CONTROLLER'S PC BOARD AND RENDER IT INOPERATIVE, SUCH IS NOT COVERED BY THE WARRANTY.