









ReWater® 220 VAC Two Pump Relay Junction Box – **Model RWJB2** - Installation Wiring Diagram

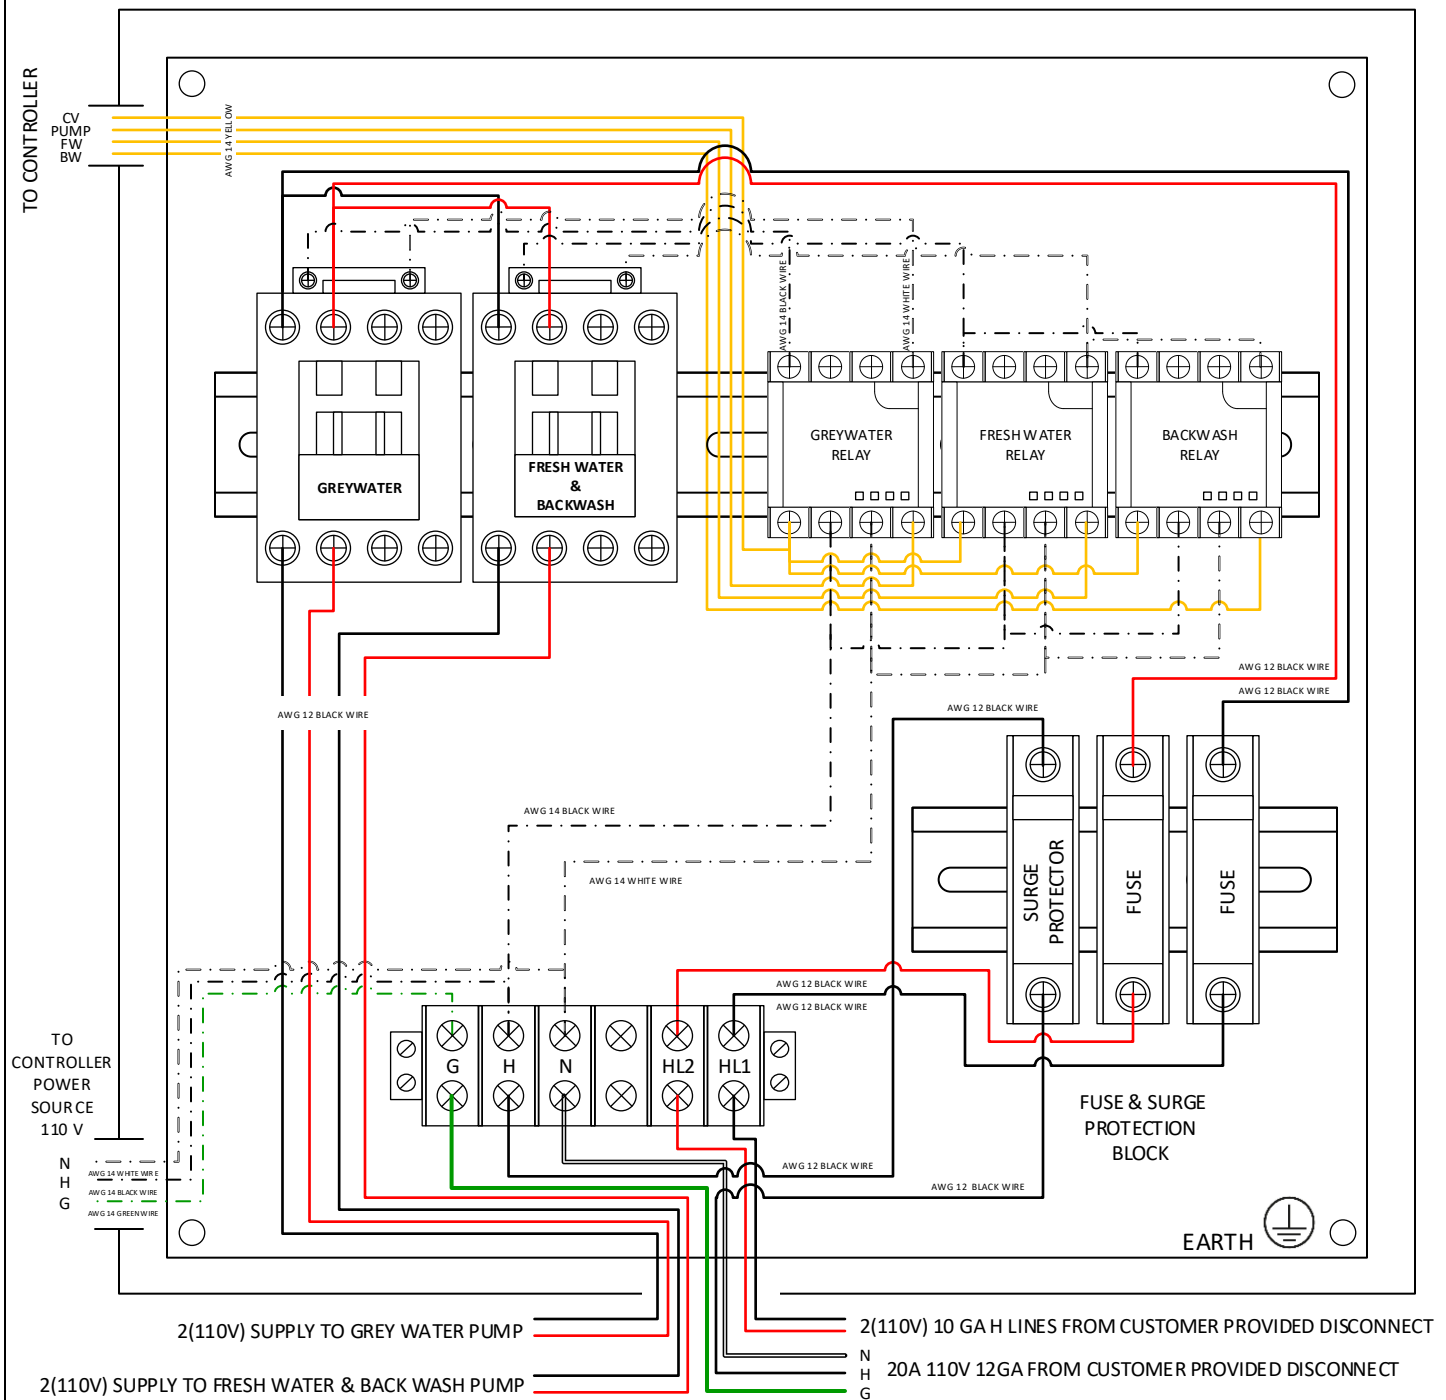

	110V (2HLINES = 220V)		N = NEUTRAL
			H = HOT
	110V		G = GROUND
	24V		

WARNING

YOU MUST GROUND THE **ReWater®** CONTROLLER THAT THIS JUNCTION BOX IS ATTACHED TO BEFORE ANY WIRE IS CONNECTED TO THIS BOX OR THE CONTROLLER OR STATIC ELECTRICITY MAY SHORT THAT CONTROLLER'S PC BOARD AND RENDER IT INOPERATIVE, SUCH IS NOT COVERED BY THE WARRANTY.